

ATARI[®] 2600[™]

REMOTE CONTROL WIRELESS JOYSTICKS



INSTALLATION INSTRUCTIONS
MODEL NO. CX42

INSTALLATION INSTRUCTIONS

Your ATARI® 2600™ Remote Control Joysticks are easy to hook up. Simply follow these instructions:

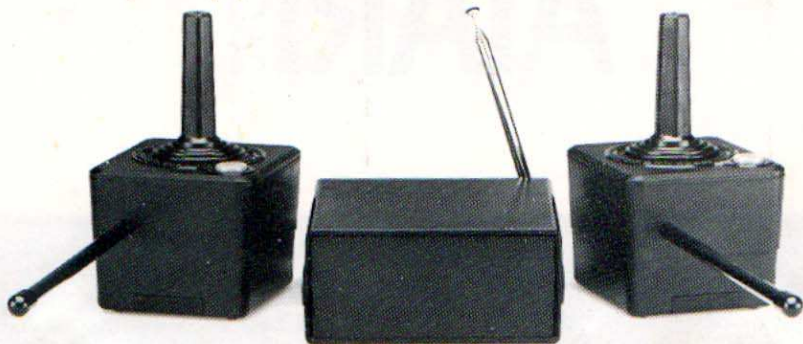


Figure 1

1. Turn the console POWER switch OFF on your ATARI 2600 console unit.
2. Unplug the AC power adapter that was supplied with your ATARI 2600 Video Computer System™ game from both the electrical outlet and from the console unit.
3. Unplug your standard ATARI Joystick Controllers. Replace them with the right and left cables from the ATARI Remote Control Receiver Unit. The cable labeled RIGHT plugs into the right controller jack; the cable labeled LEFT plugs into the left controller jack. (See *Figure 2.*)

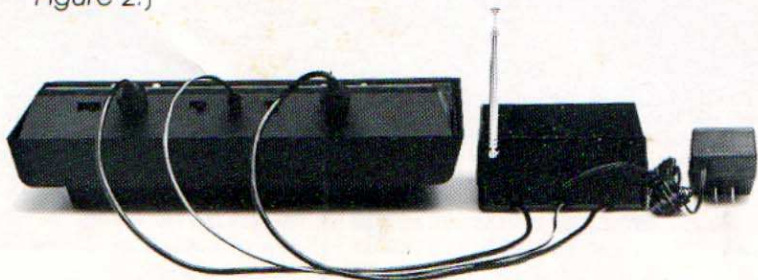


Figure 2

4. Plug the power cord from the Receiver Unit into the power jack at the back of the 2600 console unit (see *Figure 2*).
5. Plug the AC power adapter into the power jack of the Receiver Unit and into an electrical outlet (see *Figure 2*.)
6. Install one 9-volt battery into the base of each Remote Control Joystick as shown in *Figure 3*.
7. Place the 2600 console unit POWER switch to ON.
8. Place the ON/OFF switch of the Remote Control Joysticks to ON.
9. Sit back and enjoy playing your favorite ATARI Game Program™ cartridges with your Remote Control Joysticks.



Figure 3

To maintain top working condition of your ATARI 2600 Remote Control Joysticks, we recommend the following:

- Always turn the 2600 console unit POWER OFF before inserting or removing an ATARI Game Program cartridge.
- Do not place the Remote Control Receiver Unit behind the television set. We suggest you place it next to, or on top of the 2600 console unit.
- When playing one-player games, it may be necessary to have both Remote Control Joysticks turned on.
- If game play begins to respond abnormally, the batteries in one or both Remote Control Joysticks should be replaced.
- Always turn both the Remote Control Joysticks and the 2600 console unit OFF when not in use.
- Use your Remote Control Joysticks only with AC power adapter part number C010472.

(HINT: Many ATARI games can be reset by pressing the red controller button.)



© 1983 ATARI, INC. ALL RIGHTS RESERVED

 A Warner Communications Company